



Co.Stories



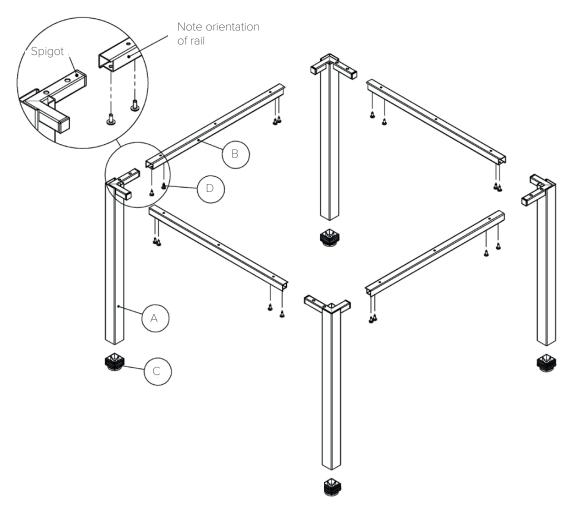

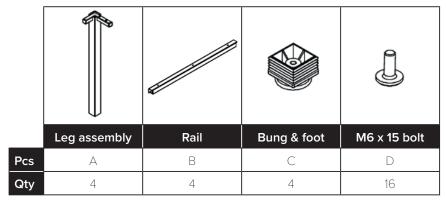


- Insert foot & bung into leg assembly
- Place leg assembly upside down on floor
- Noting orientation insert rails on spigots
- Fix in place using M6 x 15 bolts
- Fix assembled frame onto desktop to complete

ASSEMBLY GUIDE - 2

Co.Stories

- With intermediate leg



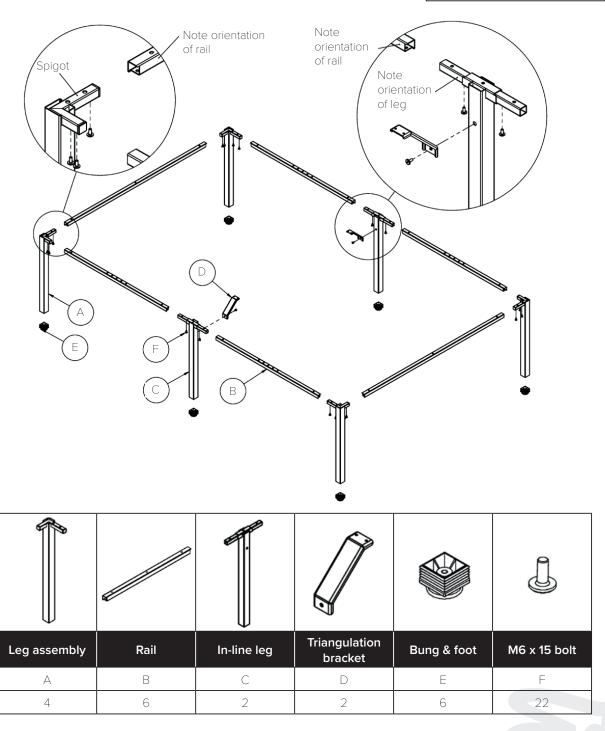

- Insert foot & bung into leg assembly
- Place leg assembly upside down on floor
- Noting orientation insert rails on spigots
- Fix in place using M6 x 15 bolts

Pcs

Qty

• Fix assembled frame onto desktop to complete

ASSEMBLY GUIDE - 3



Parchment House
13 Northburgh Street
London EC1V OJP

CONTACT

info@workstories.com +44 (0)20 3735 5224 workstories.com